 


User manual

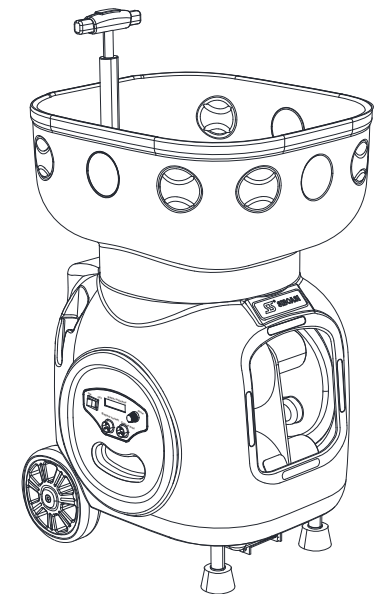

Rev 1.0



Intelligent Tennis Equipment

Model:SS-T7

APP Download Code

1 Android



(If the QR code scanning is abnormal, please visit the company's official website to download)

2 IOS



APP Store

"APP Store" Input "SS-Link"



Siboasi official Wechat

DONGGUAN SIBOASI Sports Goods Technology Co.,Ltd

Tel : 0769-8226 2773

Website: www.siboasi.com.cn

 
Eamil: ss@siboasi.com.cn

Address: No. 16, Fuma 1st Road, Chigang,
Humen Town, Dongguan, Guangdong,China

1 Product Structure




Panel Introduction

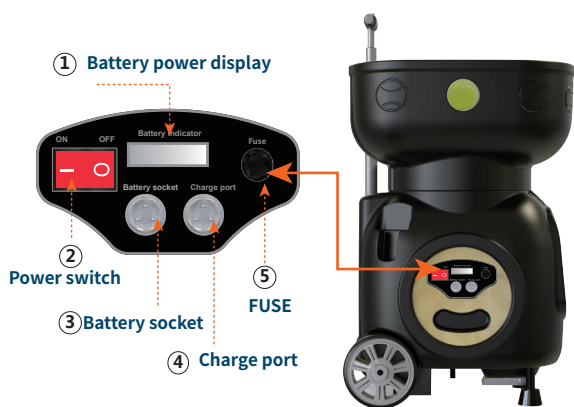


! Notice!

 Please take out the foam on both sides of the serving wheel before using

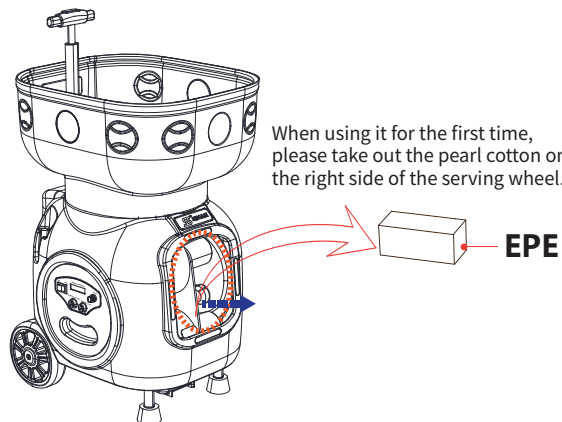

2 Remote Control Button instructions

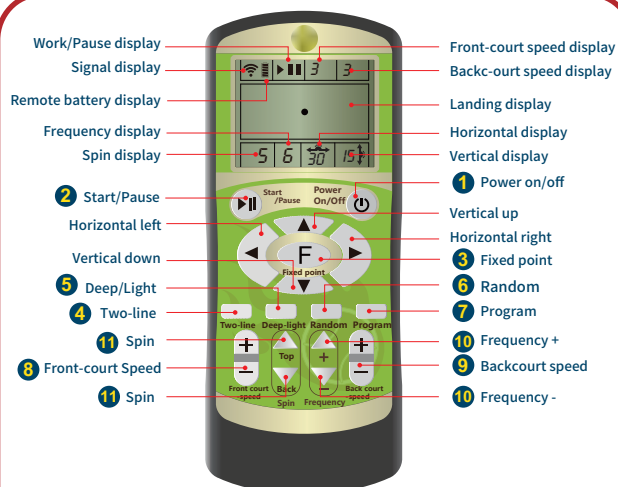 

Note: please long press the power switch for 6S to initialization of remote controller Automatically within 30S after the machine is power up. any operation is invalid if the remoter without initialized, the maximum of 16 remoters can be matched.

3 Remote control introduction


- 1.Power button:** Long press switch button for 3s to start, 3s to turn off.
- 2.Start/Pause button:** Press once for pause, once again for re-work.
- 3.Fixed mode F button:**
 - (1) Press " F " button to enter into fixed point mode, 1 default point ;
 - (2) Long press F button for 8 seconds to restore the parameters as the factory' s original settings.
- 4.Two-line:** Short press the button for the first time, narrow two-line drill; for the second time, medium two-line drill; for the third time, wide two-line drill. (Note: Horizontal angles can not be adjusted.)
- 5.Deep/Light:** Short press the button for the first time, vertical deep light drill; for the second time, medium light left deep drill; for the 3rd, medium deep left light drill; for the 4th, medium deep right light drill; for the 5th, medium light right deep drill; for the 6th, left deep right light drill; for the 7th, left light right deep drill. (Note: Spin, horizontal and vertical angels can not be adjusted.)
- 6.Random:** Short press the button for the first time, horizontal random drills; for the second time, full-court random serve with 21 landing points. (Note: 1. Horizontal angles can not be adjusted during horizontal random drills; 2. Spin, horizontal and vertical angles can not be adjusted during full-court random drills.)
- 7.Program:** (1) Short press the "Program" button on the remote control to switch to the default 10 sets of programming settings. The serving speed and ball output frequency can be adjusted. (2) Long press the "Program" button on the remote control to enter the custom programming mode. Program 21 landing points in any venue. Press the "▲▼◀▶" key to move the landing point position. Press the " F " key to confirm. Press again to increase the number of single landing points (up to 10). Press and hold the "F" key 3 seconds to cancel the current single drop point. Press and hold the "Program" button for 3 seconds to cancel all current drop points. Press the "Program" button to save and exit the programming mode.
- 8.Front-court Speed:** adjust front-court speed, 1-3 gears adjustable.
- 9.Backcourt speed:** adjust backcourt speed, 1-6 gears adjustable. (Note: 1-9 gears adjustable for fixed-point, two-line and horizontal random drills.)
- 10.Frequency +/- :** adjust the ball interval time. (1-9 levels are adjustable for fixed-point balls and two-line balls, and 1-6 levels are adjustable for other modes).
- 11.Spin:** adjust topspin/backspin, only adjustable on fixed-point, two-line and horizontal random modes.

4 APP Introduction


1. Download and install "SS-Link" APP.
(Note: Scan the QR code on the manual to download and install.)
2. Turn on the bluetooth.
3. Open "SS-Link", it would scan the current available devices automatically. (See Picture 1,2)
4. Click "Tennis T7" to connect with machine, it will enter to APP operation page. (See Picture 3)
5. Select the serving mode, the machine starts to run, and then set the frequency, speed and other parameters of this mode.



 Picture 1

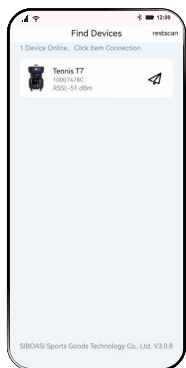


Picture 2

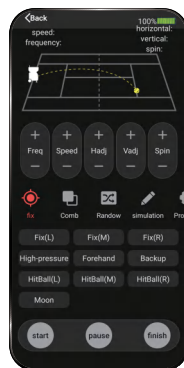 


Picture 3

6. Programming mode operation steps

 
- ① Point "Program", enter the self-defined programming name, then point "OK". (See Picture 4,5)
- ② Then click "MODE" on the screen to select the landing point, select the number of serves at this landing point (the number of serves can be 1-10), and then click "Save program" (See Picture 6,7)

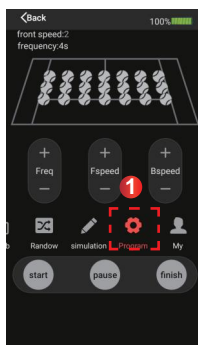

Picture 4

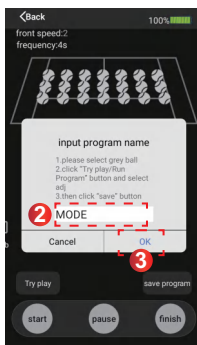 


Picture 5

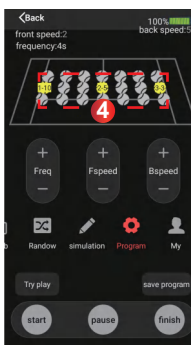 


Picture 6

 - ③ In "My Archive" ->click on the newly saved program "MODE", then set the speed and frequency, click the "Start" button, and the device will start working. (See Picture 8)

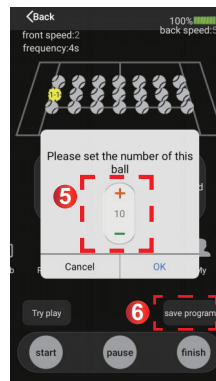


Picture 7

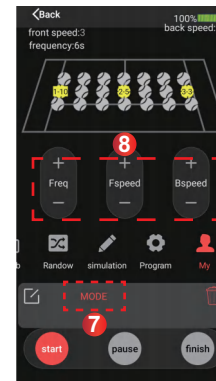 

Picture 8

 - ④ View custom programming in "My Archive", modify and delete custom programming. (See Picture 9)
- ⑤ Click the "Finish" button to exit the operation interface.

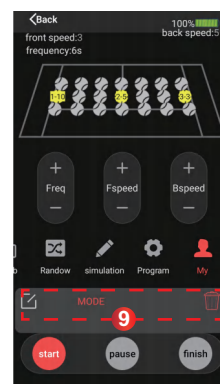

Picture 9

5 Product parameters

Power	170W	Product color	Black/Red
Power supply	100-240VAC 50/60Hz	Frequency	1.8-9 s/ball
Battery	12V,12AH	Ball capacity	120 balls
Product weight	17 kg	Storage size	47x40x53 cm

6 Parts list(Standard)

1. Remote control 1PC	2. One pair of battery for remote control
3. (12VDC battery charger 1PC)	4. Fuse 2PCS
5. Dust cover 1PC	6. Vacuum cleaner 1SET
7. User manual 1PC	8. Warranty 1PC

7

Notice



- ▲ Do not repair the machine or change the machine parts at will, otherwise the machine will be damaged or serious accidents will be caused.
- ▲ Do not use the machine in a wet court or rainy day, wet ball will cause ball stuck or damage.
- ▲ If hit the ball into the machine accidentally, turn off the power right away and then take out the ball.
- ▲ It is forbidden to stand at the ball outlet when the machine is working.
- ▲ Do not move the machine while it is working.
- ▲ It is forbidden to touch the inside of the machine by hand to avoid accidents.
- ▲ Clean the tennis fur or sundries in the machine regularly, Be sure to cut off the power when cleaning the machine, otherwise maybe cause danger.
- ▲ Minors are strictly prohibited from operating the machine without permission to avoid endangering personal safety and damaging the machine.
- ▲ It is forbidden to tear up the machine bar code.

Caution:
If maintenance is required,
please contact manufacturer

8

Precautions for using lithium batteries



- 1.** Batteries are classified as dangerous goods. Do not let minors use them. It is strictly prohibited to drop, throw, impact, crush, puncture, or short-circuit the positive and negative poles of the battery, in order to avoid serious safety hazards such as fire or explosion.
- 2.** Do not transport, store, or use devices in high temperature or humid environments, otherwise it will damage the battery. Using or charging the battery in an environment above 50°C can also pose safety hazards.
- 3.** Use the dedicated charger provided with the device for charging. Using an incompatible charger can damage the battery's lifespan. Charge the device in a spacious area without flammable or foreign objects nearby. Continuous charging should not exceed 24 hours.
- 4.** After the battery is discharged, it should be charged promptly or within 24 hours. If the device is not used for a long time, charge the battery at least once every 6 months, otherwise it will shorten the battery life or cause damage that prevents charging.
- 5.** Batteries must be scrapped after 5 years of use or storage. Otherwise, there may be serious safety hazards such as spontaneous combustion or explosion during storage, use or charging. Dispose of batteries that have been used for more than 5 years according to the local hazardous materials disposal process.

9

Common faults and solutions

FAQ	Cause	Solution
No power	1.AC/DC power selection error. 2.Fuse broken.	1.Choose the correct power. 2.Change new fuse.
No serving	1.The machine power or remote control switch is not turned on. 2. Ball stuck inside of machine.	1.Check the machine power and remote control switch. 2.Power off the machine to take out the ball.
Ball out off court	1.The machine is placed incorrectly. 2.The speed is too fast. 3. Mix to use different standard tennis balls.	1. Put the machine in correct place. 2.Decrease the speed by remote control. 3.Use the same standard tennis balls.

Note:1. The equipment is with two wheels to rotate and squeeze to shoot out the ball, so would slightly wear the ball, which is normal .
2. The dropping point would slightly deviated if the quality of the ball is different and the position of the machine is different.