

VII Parts list(Standard) >>

1.AC Power cord 1 pcs	2.Fuse 4 pcs
3.Remote control 1 pcs	4.One pair of battery for remote control
5.Straight ball passing way 2 pcs	6. L-shape ball passing way 1 pcs
7.Manual 1pcs	8. Warranty Card 1 pcs

VIII Notice >>

- ▲ Do not repair the machine or change the machine parts at will, otherwise the machine will be damaged or serious accidents will be caused.
- ▲ Do not use the machine in a wet court or rainy day, wet ball will cause ball stuck or damage.
- ▲ Please turn off the machine immediately and contact the manufacturer service if come to machine abnormals like Big Noise, Smog, Electricity Leakage etc.
- ▲ It is forbidden to stand at the ball outlet when the machine is working.
- ▲ Do not move the machine while it is working.
- ▲ It is forbidden to touch the inside of the machine by hand to avoid accidents.
- ▲ Be sure to cut off the power when cleaning the machine, otherwise maybe cause danger.
- ▲ Minors are strictly prohibited from operating the machine without permission to avoid endangering personal safety and damaging the machine.
- ▲ It is forbidden to tear up the machine bar code.

Caution:

If maintenance is required, please contact manufacturer.

IX Common faults and solutions >>

FAQ	Cause	Solution
Do not work	1.AC plug fails or bad connection. 2. Fuse damage. 3.AC power is not selected correctly.	1. Check the AC socket is OK or not. 2.Replace the fuse. 3. Use the correct power supply.
Shooting Weak	1.Ball flexibility is not enough. 2.The inner parts are damaged.	1.Add pressure for the volleyballs, or change to use new ones. 2.If still can not solve the problems, please contact back with the manufacturer or agents.
No ball out or Ball stuck	1.The shooting wheels has oil or water . 2.Not a standard ball.	1.Turn off the power, clear the water or oil, take out the stuck balls, adjust to the fast speed to test, let machine work for few minutes before putting in the balls . 2.Please use standard balls. 3.If still can not solve the problems, please contact back with the manufacturer or agents.
Unstable for fixed point function	1.The ball in different specifications and air pressure . 2.Machine position moved when shooting.	1.Choose the same standard v olleyballs in same air presure. 2.Brake the wheels.

Note: 1. The equipment is with two wheels to rotate and squeeze to shoot out the ball, so would slightly wear the ball, which is normal .
2. The dropping point would slightly deviated if the quality of the ball is different and the position of the machine is different.

APP Download Code

1 Android



(If the QR code scanning is abnormal, please visit the company's official website to download)

2 IOS



APP Store

"APP Store" Input "SS-Link"

SS-Link



Siboasi official Wechat

DONGGUAN SIBOASI Sports Goods Technology Co.,Ltd


Tel : 0769-8226 2773

Website: www.siboasi.com.cn

Eamil: ss@siboasi.com.cn

Address: No. 16, Fuma 1st Road, Chigang,
Humen Town, Dongguan, China

User Manual

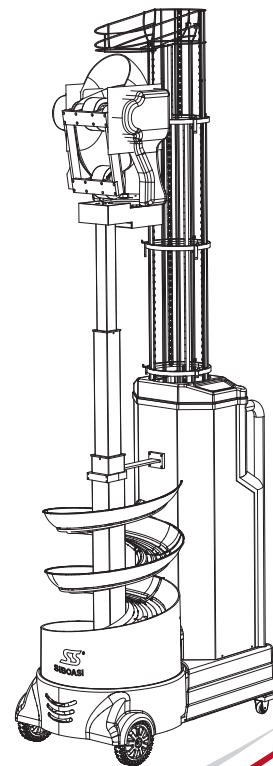


Intelligent Volleyball Equipment

Model: SS-V2201A

I Product Structure >>



II Ball basket installation >>

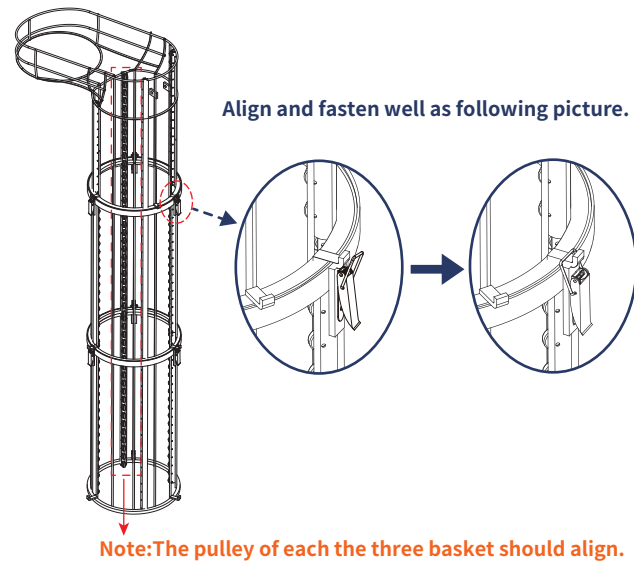

III Remote Control Button instructions >>



Note: please long press the power switch for 6S to initialization of remote controller. Automatically within 30S after the machine is power up. any operation is invalid if the remoter without initialized, the maximum of 16 remoters can be matched.

IV Remote control instructions >>

- 1. Power button:** Long press switch button for 3s to start, 3s to turn off.
- 2. Start/Pause button:** Press once for pause, once again for re-work.
- 3. Fixed mode F button:** (1) Press "F" button to enter into fixed point mode, 1 default point; (2) Long press the "F" button on the remote control for 3 seconds to save the programmed fixed-point parameter; (3) Long press the "F" button of the remote control for 8 seconds, and the default parameters of the remote control will be restored to the factory setting.
- 4. Vertical recirculating button:** press the vertical 5-point cycle for the first time; Press the vertical wide, deep and shallow ball for the second time; Press Vertical medium and shallow ball for the third time.
- 5. Horizontal recirculating button:** press the horizontal random cycle for the first time; Press the horizontal wide two line ball for the second time; Press the horizontal middle two line ball for the third time; Press the horizontal narrow two-line ball for the fourth time; Press the horizontal three line ball for the fifth time.

6. Random / programming button: (1) Short press "random / programming" on the remote control to enter the random serve of the whole court. In this mode, the serve speed and frequency can be adjusted, the number of balls can not be adjusted. (2) Short press "random / programming" on the remote control for the second, third and fourth times to switch the default three groups of programming settings. Speed, frequency and ball count can be adjusted. (3) Long press "random / programming" on the remote control to enter the user-defined programming mode. You can set up 35 landing points in the field. Press the up, down, left and right keys to adjust the landing point position, press "F" key to confirm, press Cancel again, long press to cancel all programming landing points. Short press "random/programming" button to save and exit the programming mode.

7. Cross cycle button: Press the medium shallow left deep ball for the first time; Press the medium deep left shallow ball for the second time; Press the middle deep right shallow balls for the third time; Press the medium shallow right deep balls for the fourth time; Press the left deep right shallow ball for the fifth time; Press the left shallow right deep ball for the sixth time.

8. Speed +/- button: 1-9 grade adjustable.

9. Frequency +/- button: 1-9 grade adjustable.

10. Topspin/Backspin button: Adjust topspin & Backspin.


11. Number of balls button: Adjust the number of placement serves. (Ball count 1-10 optional)

V APP Introduction >>

1. Download and install "SS-Link" APP. (Note: Scan the QR code on the manual to download and install.)
2. Turn on the bluetooth.
3. Open "SS-Link", it would scan the current available devices automatically. (Picture 1)
4. Click "SS-V2201A" to connect with machine, it will enter to APP operation page. (Picture 2)

Programming mode operation steps

1. Point "add program", enter the self-defined programming name, and then click " " on the screen to select the ball dropping point, Then point "save". (Picture 3, 4, 5, 6)
2. Click the "mode" of the program just edited and saved, and then set the speed, frequency, rotating ball and number of balls. (Figure 7)
3. Click "control" to return to the main operation interface.

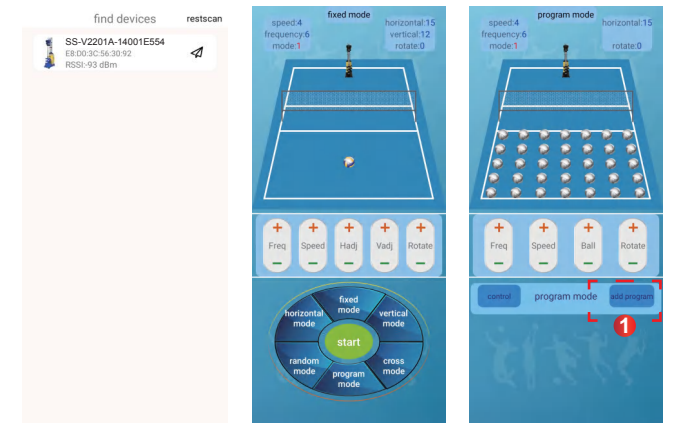

Picture 1

Picture 2

Picture 3



Picture 4

Picture 5

Picture 6

Picture 7

VI Product parameters >>

Max input power	360W	Capacity	30PCS
Power supply	100-240VAC 50/60Hz	Frequency	4.6 - 8 S/ball
Product weight	170Kg	Product size	114x66x320cm

